
The Gracie Laser User Manual Parts List

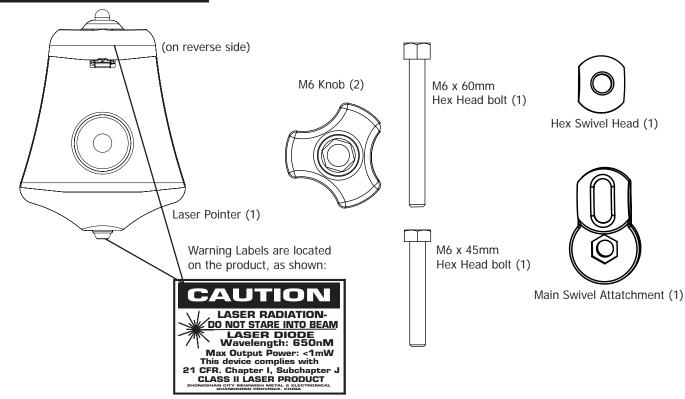

SAFETY PRECAUTIONS



- 1. CAUTION: Use of controls, adjustments, or performance of procedures other than given in USER MANUAL may result in hazardous laser light exposure.
- 2. This product is safe to use in normal operations as described in these instructions. AVOID DIRECT EYE EXPOSURE. DO NOT LOOK DIRECTLY INTO THE LASER EMITTER.

Battery Installation: Use the battery compartment opening tab to remove the battery cover. Batteries are inserted with their possitive pole (+) opposite each


other. (Illustration shown)

Specifications:

Power: Class II 650nm Wavelength: Output Power: 1mW Battery Type: 2 AA


Battery Life: 150 Continuous hours Weight: 31.2g Without Batteries 6.929" L X 1.533" W Dimensions:

Color: Blue

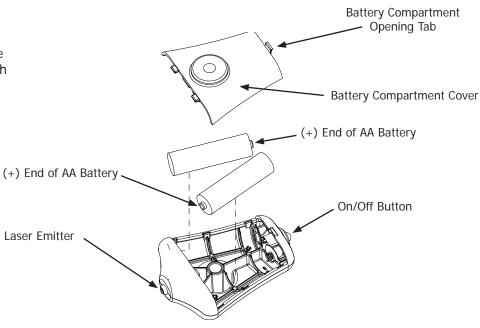

The Grace Company certifies that the Gracie Laser complies with the government FDA regulation 21CFR 1040.10 and 1040.11.

Laser Assembly

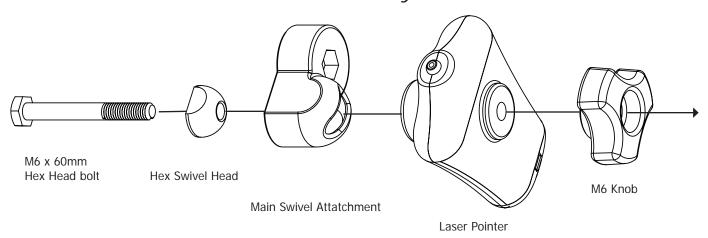

Assembly Steps:

Step 1: Insert the M6x60mm Hex Head Bolt through the Hex Swivel Head with the rounded portion up.

Step 2: Continue by pushing the bolt through the Main Swivel Attachment and through the Laser Pointer.

Step 3: Tighten the M6 Knob onto the of of the M6x60mm Hex Head Bolt.

Carriage Installation:

Step 1: Insert the M6x45mm Hex Head Bolt through the Laser Pointer Assembly.

