


Plugging in the Laser Addendum


Parts Needed:

1. Laser (1) (with cable and clip)

1- Attach Laser to handles by simply snapping into place.

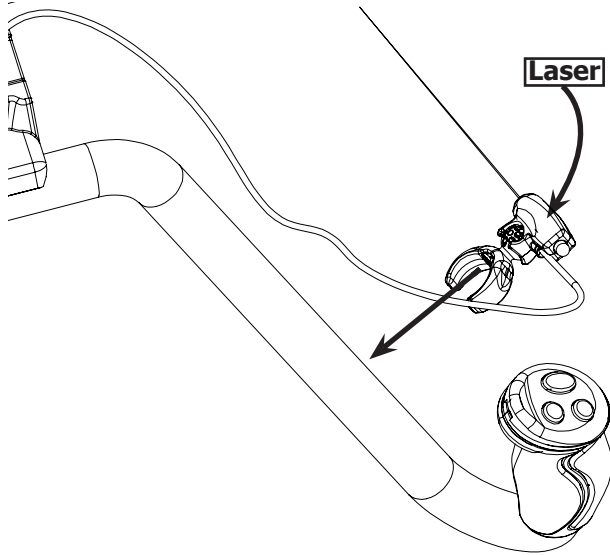

2- Plug laser into the back of the display hub in to the DC Connector Port.

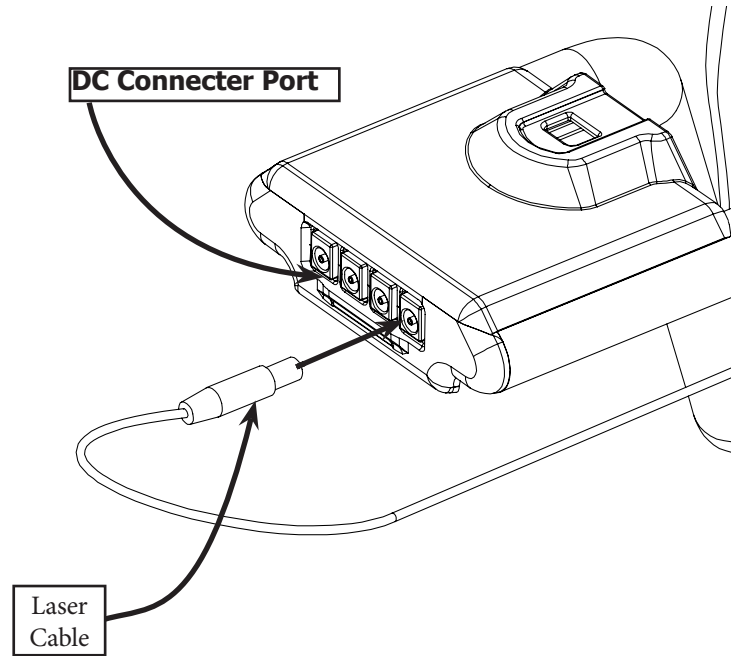

3- Secure Laser Cable to Handle Bar with Velcro Strips as shown.

