


My Comfort Cutter™

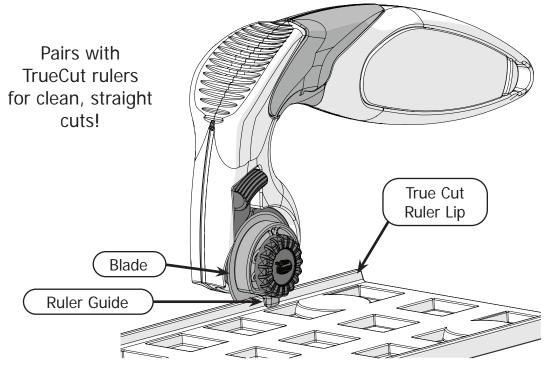

Included Parts

(Some parts pre-assembled)



Ergo-Handle TC-09-1598



 
Blade Guard TC-05-1239



Bolt TC-03-1556




Nut TC-05-1597




28 mm Blade TC-08-1101



 
Plastic Insert TC-05-1240



Spring TC-03-1243

 

Ruler Guide TC-05-1241

 

Plastic Washer TC-05-1236




Guide Bolt TC-05-1596

My Comfort Cutter

Components


The cutter can be set up with or without the ruler guide and for right or left-handed use.

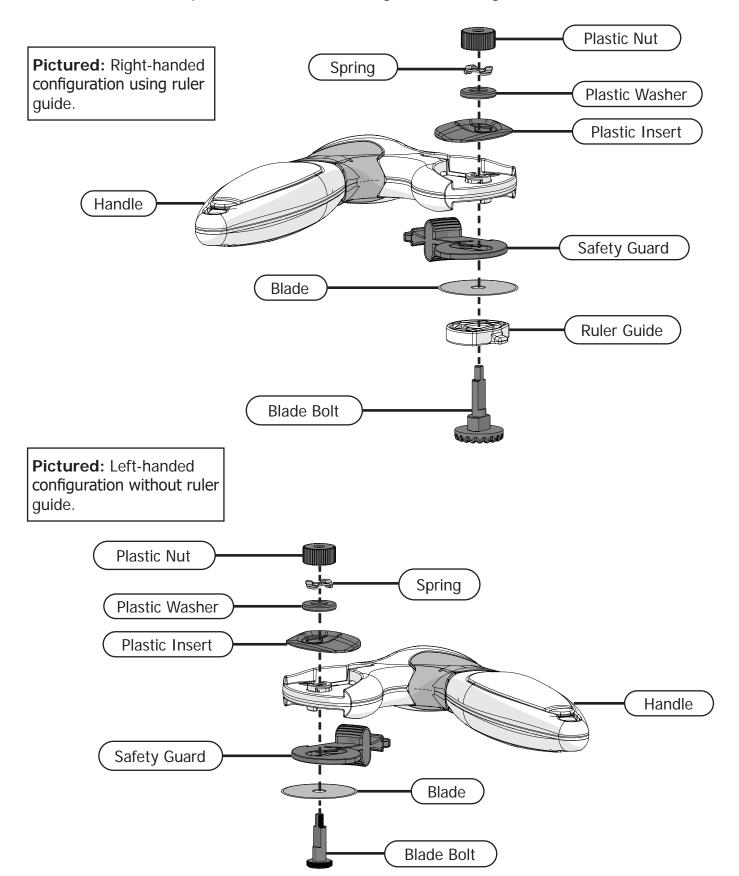


Changing the Blade

Take the following steps to change the blade on the cutter.


Remove the plastic nut, spring, and plastic washer.

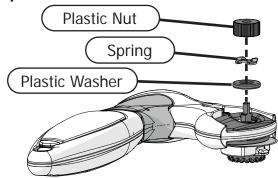


Push on the end of the **bolt** to remove the bolt, **blade**, and **ruler guide**.

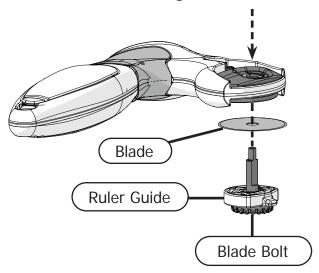

3 Reinstall the bolt and ruler guide with a **new** or sharpened blade.

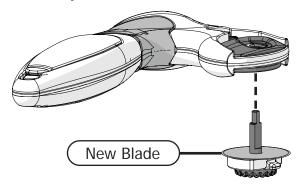


4 Reinstall the plastic nut, spring, and plastic washer.

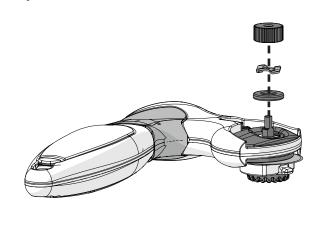


Swapping Hands

Take the following steps to switch the cutter from right-handed to left-handed.

Remove the plastic nut, spring, and plastic washer.

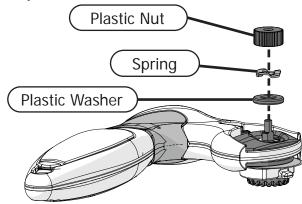


Push on the end of the **bolt** to remove the bolt, **blade**, and **ruler guide**.

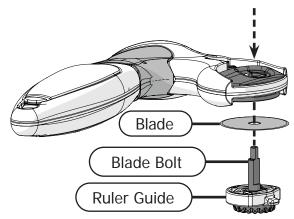


My Comfort Cutter

Swapping Hands Continued


3 Remove the **safety guard** by pushing it back and then pulling it out.

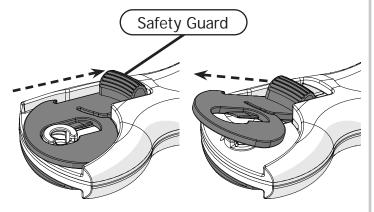


4 Remove the **right handle base** by pulling it out.

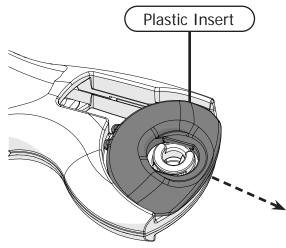


5 Install the right handle base on the left side of the cutter.

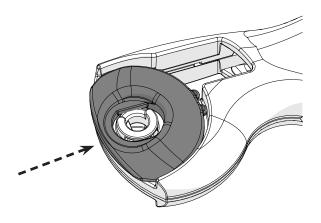

6 Reinstall the safety guard on the right side of the cutter by inserting it at an angle and then pulling it out.

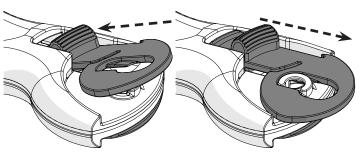

Reinstall the bolt, blade, and ruler guide so that they are on the right side of the cutter.

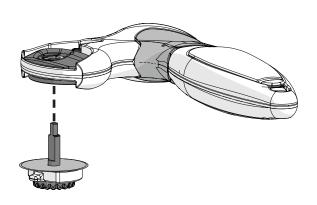

8 Reinstall the nut, spring, and washer so that they are on the left side of the cutter and tighten to hold in place.

