


Q'nique15 PRO

Thread Guide

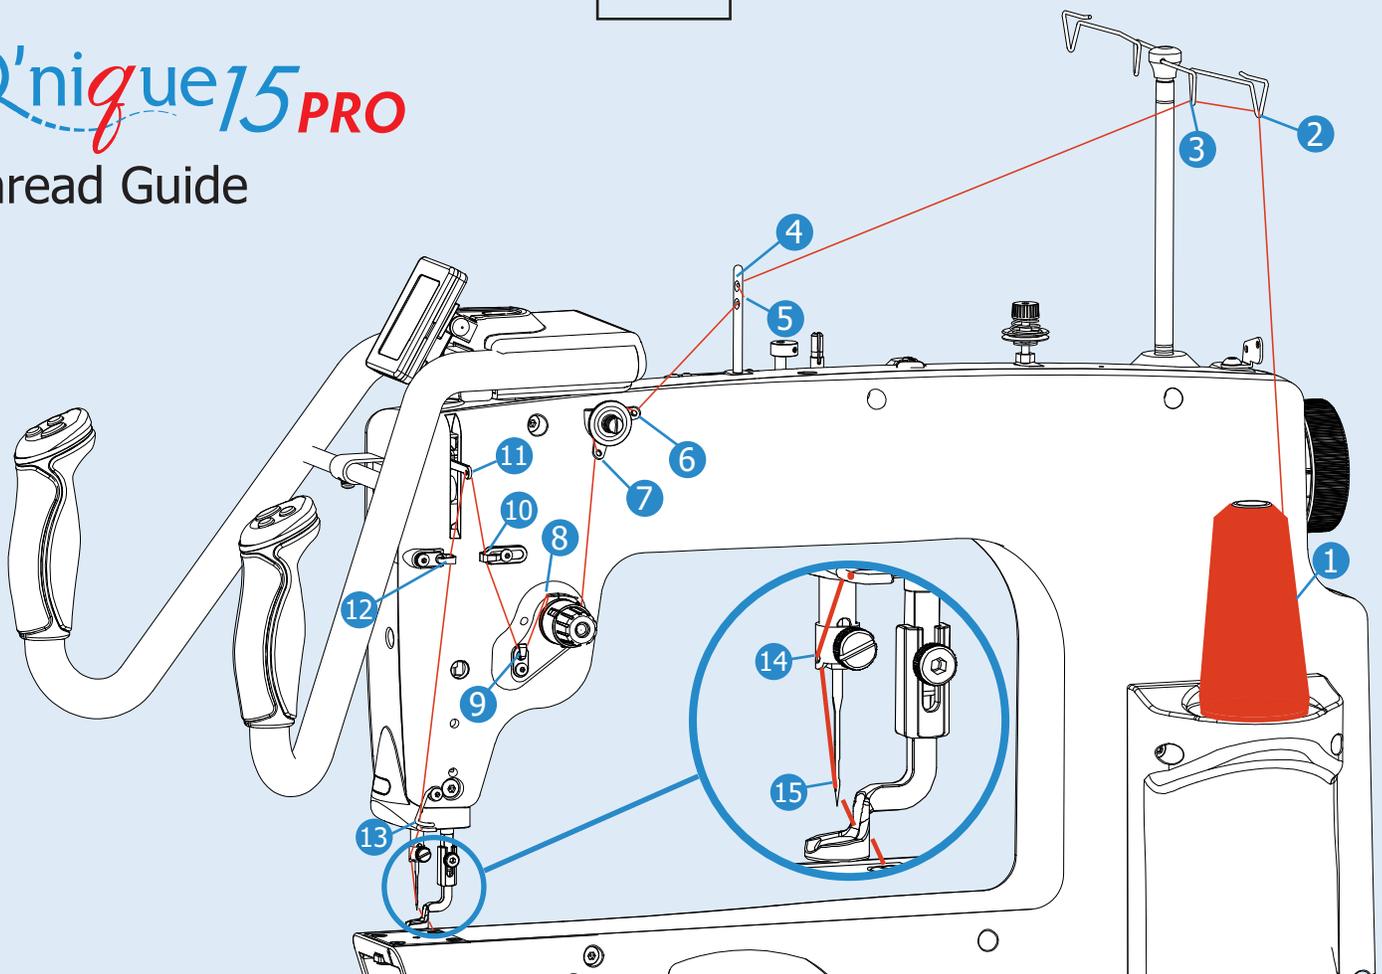

Troubleshooting

If your thread is breaking...

- Replace your needle if it is bent or burred. Use the needle magnet to align and install your needle straight.
- Follow the "Top Thread Tension" guide on the back to correct your thread tension.
- Check that your machine is threaded correctly using the "Thread Guide" above.
- Follow the "Bobbin Guide" on the back for threading, tensioning, and installing the bobbin case.
- Check the hopping foot height.
- Adjust the height of the take-up rail on your quilting frame to be 1/4 inch above the needle plate.
- For more help call 1(800) 264-0644 or e-mail support@graceframe.com.
- Follow the "Top Thread Tension" on the back guide to correct your thread tension.
- Check the hopping foot height.
- Adjust the height of the take-up rail on your quilting frame to be 1/4 inch above the needle plate.
- For more help call 1(800) 264-0644 or e-mail support@graceframe.com.


If your machine is skipping stitches...

- Replace your needle if it is bent or burred. Use the needle magnet to align and install your needle straight.

Needle Information

Needle Style: DPx5 MR, 134 MR, 1955 MR **Bobbin Type:** M-Class

Use a straight needle.

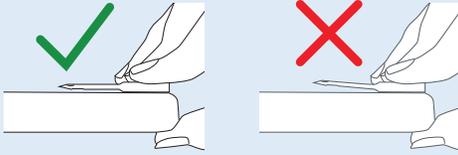


Size: Thread Size and Type:


| | |
|--------|---|
| 14/90 | mono-filament, 100 wt. silk, 60 wt. polyester |
| 16/100 | mono-filament, 60 wt., 50 wt. polyester or cotton thread |
| 18/110 | 40 wt. cotton and polyester, 30 wt. cottons and polyester |
| 20/125 | any thread 30 wt. or heavier |

Bobbin Guide

Place the bobbin in the bobbin case so that when you pull the thread, the bobbin rotates clockwise.

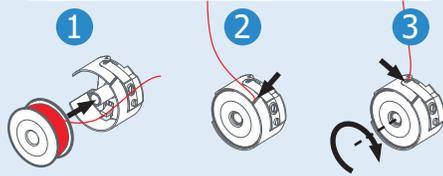

Tension Test: Hold the bobbin case in your hand and pull the thread up.

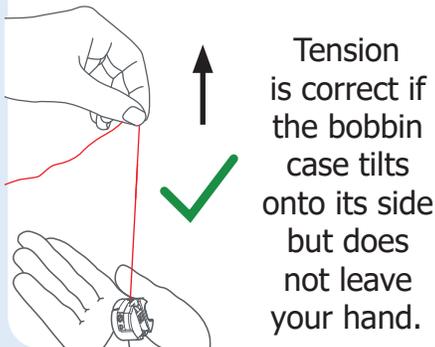

Tension is correct if the bobbin case tilts onto its side but does not leave your hand.

Set the bobbin tension first, and then adjust the top thread tension.

If the bobbin case does not tilt up...

Increase Tension by twisting the bobbin case screw clockwise with a pin or fingernail.

Bobbin Screw

If the bobbin case leaves your hand...

Decrease Tension by twisting the bobbin case screw counter-clockwise with a pin or fingernail.

Bobbin Screw

Top Thread Tension


Set the bobbin tension first (see above).

Correct thread tension
The top and bobbin thread knot in the middle of the fabric layers.



If the top thread is pulled through the bottom layer of fabric, increase tension.

If the top thread is pulled through the bottom layer of fabric, increase tension.

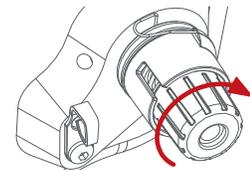


If the bobbin thread is pulled through the top layer of fabric, decrease tension.

If the bobbin thread is pulled through the top layer of fabric, decrease tension.




Sewing Button Controls

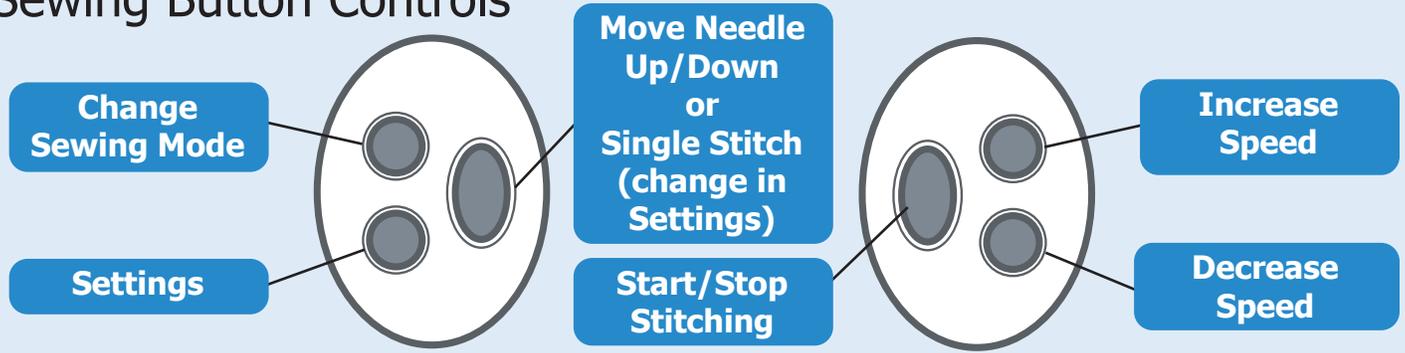

*These buttons may be reversed in Settings for left-handed quilters.

Sewing Screen

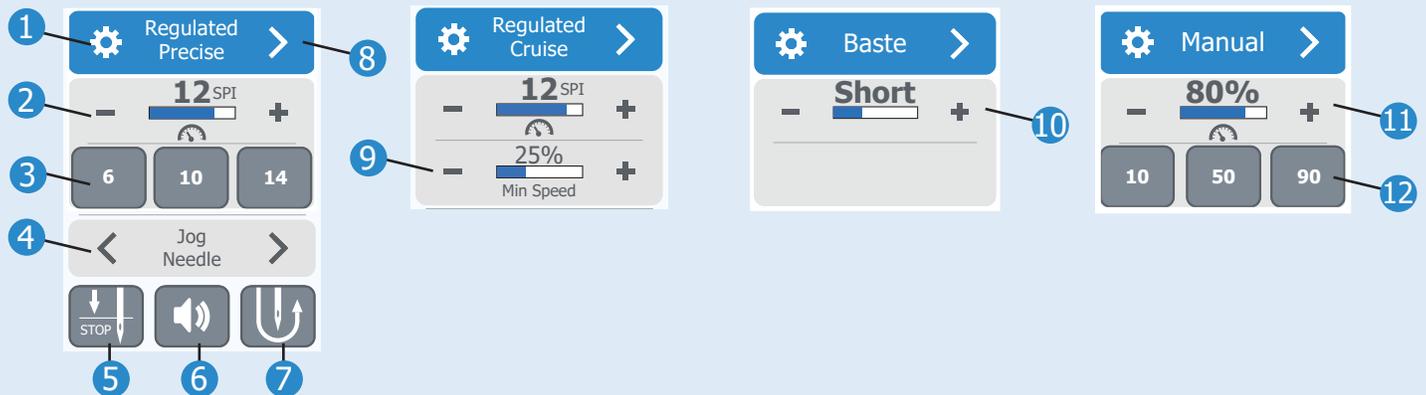

1 Settings

2 Stitch Length

Displayed in Stitches Per Inch (SPI) or Centimeter (SPC) (see Settings to set the unit measurement). Press [-] to decrease SPI/SPC and [+] to increase SPI/SPC.

3 SPI/SPC Presets

Press to set the SPC/SPI shown.

4 Jog Needle

Press [<] or [>] to move the needle incrementally.

5 Needle Stop Indicator

Shows if the needle will stop sewing in the [Up] or the [Down] position. Press to switch to [Up] and [Down].



[Up]



[Down]

6 Over-speed Indicator.

Press to switch audible signal [On] and [Off]. Icon will change [Red] if you move your machine faster than it is able to make even stitches.



Machine Inactive



Machine Active



Over-speed: Move machine slower.

7 Full Stitch/Half Stitch

Pressing this button to create a full stitch, or a half stitch. Change which button is active in Settings.



[Full Stitch]



[Half Stitch]

8 Sewing Mode

Press [>] to switch to Precise, Cruise, Manual, and Baste.

9 Minimum Speed

Shown as a percentage of the machine's highest speed, ranging from 5% to 25%. Press [-] to decrease stitch speed and [+] to increase stitch speed.

10 Baste Length

Press [-] to decrease stitch length and [+] to increase stitch length.


11 Manual Speed

Displayed as a percentage of the highest speed. Press [-] to decrease speed and [+] to increase speed.

12 Manual Speed Presets


Press to use that stitch speed. Press and hold to set.

Settings Button Controls

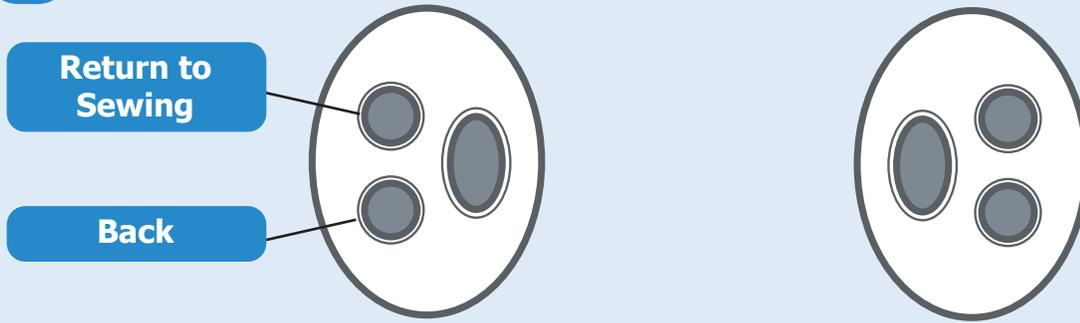

*These buttons may be reversed in Settings for left-handed quilters.

Settings Screen

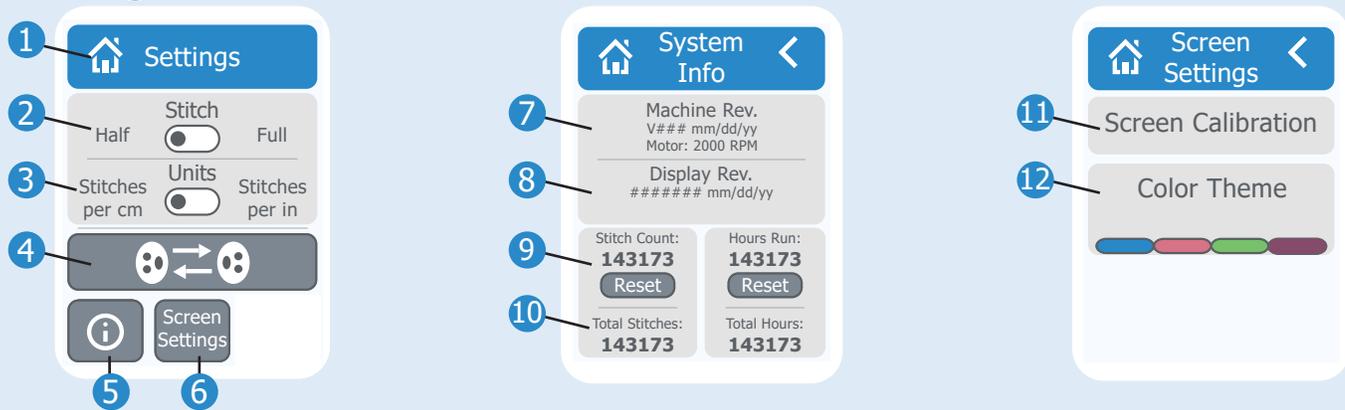

1 Return to Sewing

2 Stitch Button Setting
Change which button is active on the Sewing Screen and on the handle button.



3 Units
Change speed units from SPI to SPC on the Sewing Screen.

4 Reverse Handle Buttons
Reverse the Left and Right Handle Button Controls. This is useful for Left-handed Quilters.

5 System Information

6 Screen Settings

7 Machine Revision Information

8 Display Revision Information

9 Stitch Count
Press [Reset] to reset the Stitch Count. Total Stitches will not reset.

10 Hour Count
Press [Reset] to reset the Hour Count. Total Hours will not reset.

11 Screen Calibration
Use this setting if buttons aren't activated correctly when pressed.

12 Color Theme
Choose a color theme for your screen.