
Grace Hoop²DM

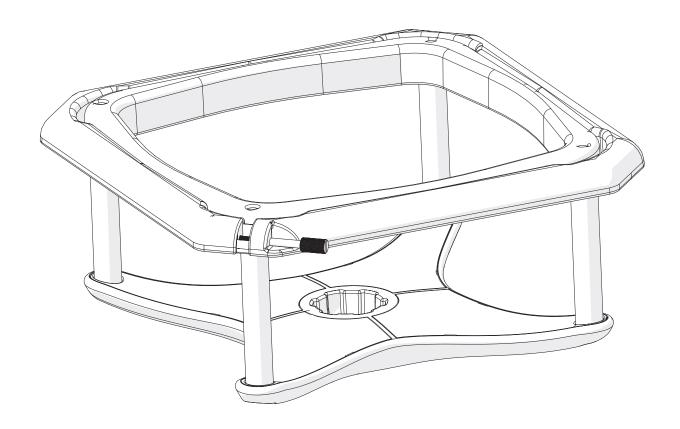

Copyright December 26, 2019
Grace Company
(Reproduction Prohibited)
Version 1.3



Included Parts & Tools


Please make sure all pieces are included in your kit.

Lap-Hoop Base	Column Spacer	Inner Hoop	Spacer Bolt
			0
GCF-09-14187	GCF-05-14130	GCF-09-14213	GCF-03-14149
Allen Wrench 4 mm	Outer Hoop		
HDW-03-10167	GCF-09-14125		


Assembling the Lap-Hoop

If purchased with the Lap-Hoop Stand accessory, please refer to the instructions in the stand kit for assembly.


Place the **lap-hoop base** down on the edge of a flat surface so the base is curving up.

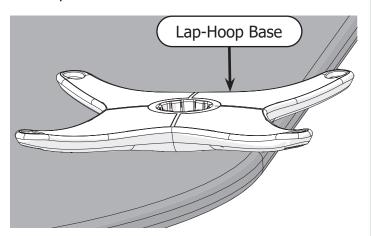


2 Insert a **column spacer** into each of the lap-hoop slots.

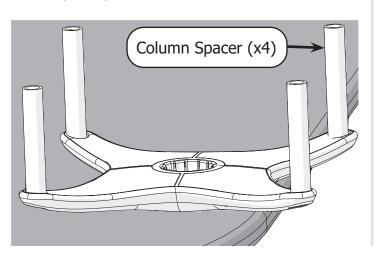


3 Align the screw holes and carefully balance the **inner hoop** on the column spacers.

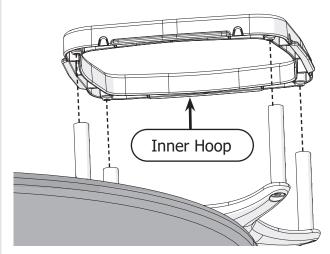

4 Screw a spacer bolt through the base, spacer column, and into the inner hoop using the 4 mm Allen wrench.

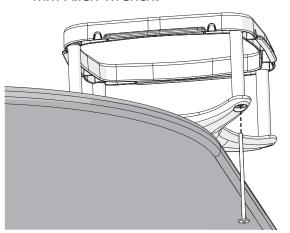


5 Rotate the lap-hoop and repeat steps four and five with the remaining spacer bolts.

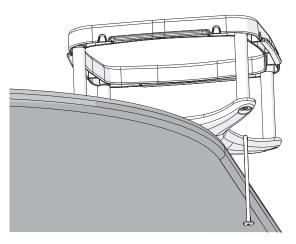


Loading the Fabric


1 Lay the quilt over the lap-hoop.

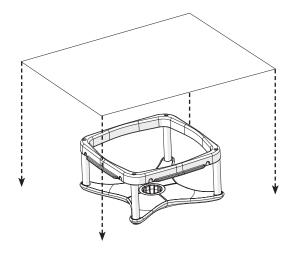

2 Position the fabric so the area you wish to stitch onto is inside the hoop.

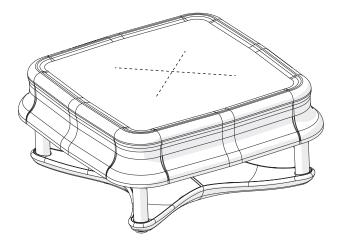

3 Keep the fabric smooth and slide the **outer hoop** down onto the lap-hoop.

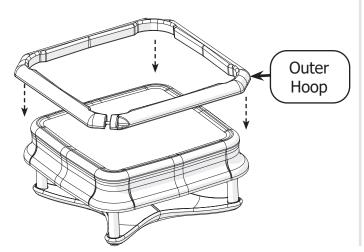

Turn the corner screw to loosen or tighten the outer hoop.

