

Bungee Clamp Instructions

Operation: Slip the fabric and batting into the mouth of the bungee clamp (Fig. 3 and Fig. 4).

To release tension on the clamp, press the bungee release lever (Fig. 1 and Fig. 2).

To tighten the bungee, press the button on the bungee stop and pull back on the cord.

Attach to frame: Remove the bungee stop from the cord. Pass the cord through the bungee mounting bracket holes on the left and right sides of your frame (Fig 3). Re-install the bungee stop onto the cord.

Note: Bungee mounting brackets on frame vary according to frame model.

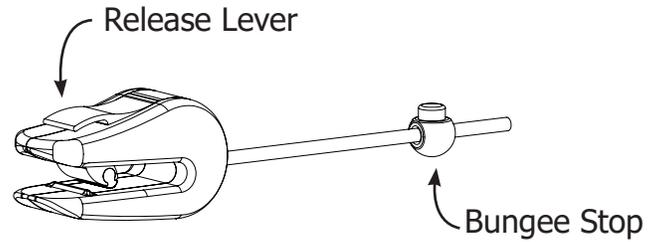


Fig. 1

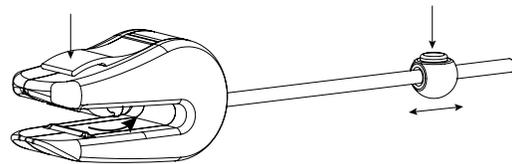


Fig. 2

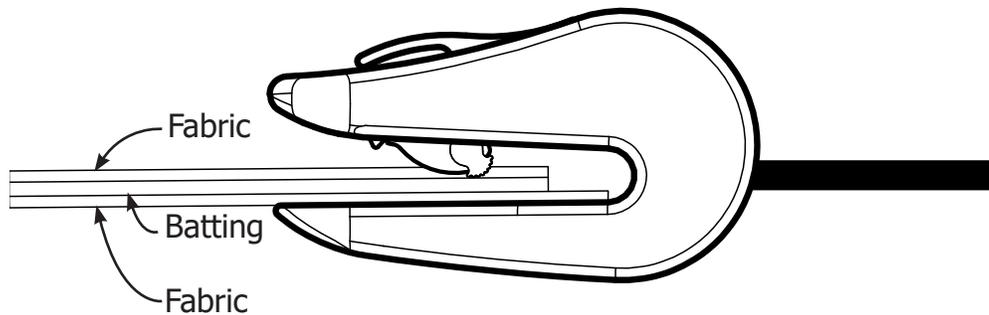


Fig. 3

Note: If the clamp lever is on the batting layer, flip the clamp over so that the lever is gripping the fabric layer instead of the batting (Fig. 4).

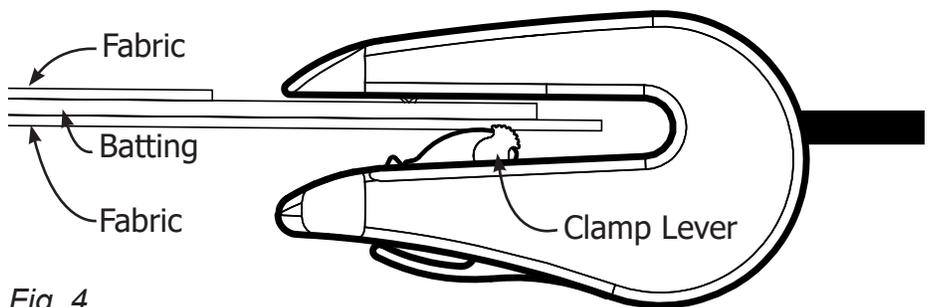


Fig. 4