

Q'nique19

Compatible with Q'nique 19

INSTRUCTIONS


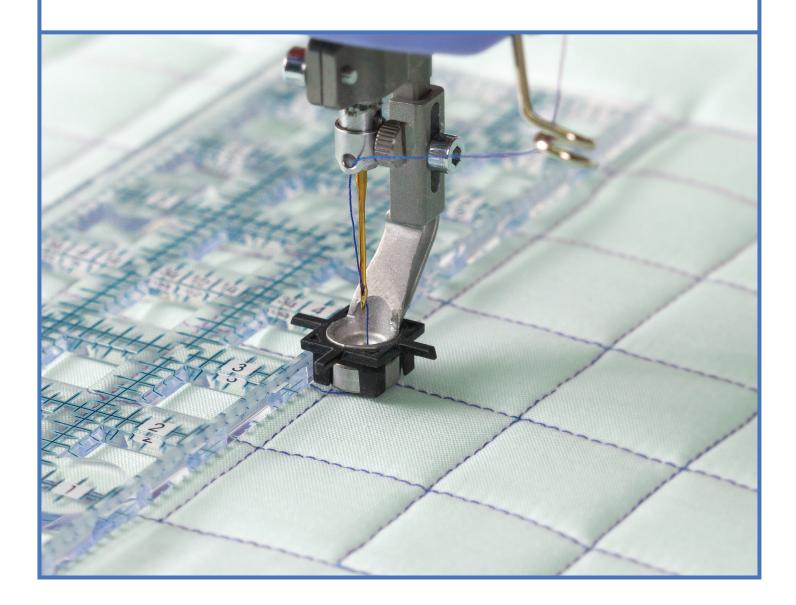



Table of Contents:

Parts List 3	3
Collar Installation Instructions4	ŀ
Foot Installation Instructions5	5
Usage Instructions	
Ruler6	5
True Track Foot6	5
Precision Foot7	7
Roller Foot7	7

Parts List:



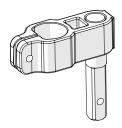



Precision Foot

ACC-09-15258




Rolling Foot ACC-09-15255

Hopping Foot Collar Assembly SMP-04-14669

TrueTrack Foot ACC-09-15257





Standard Hopping Foot SMP-04-10057

Ruler 3x8 inch ACC-05-15299


SBHCS M3 x 8 mm (x2) HDW-03-10966

Hopping Foot Height Tool SMP-04-12171

Tools Needed: 3 mm Allen Wrench (not included)

Collar Installation Instructions:


These instructions will go over installing the new hopping foot collar assembly. After following these instructions, or if your machine already has the new hopping collar, continue to the "Foot Installation Instructions" on the next page.

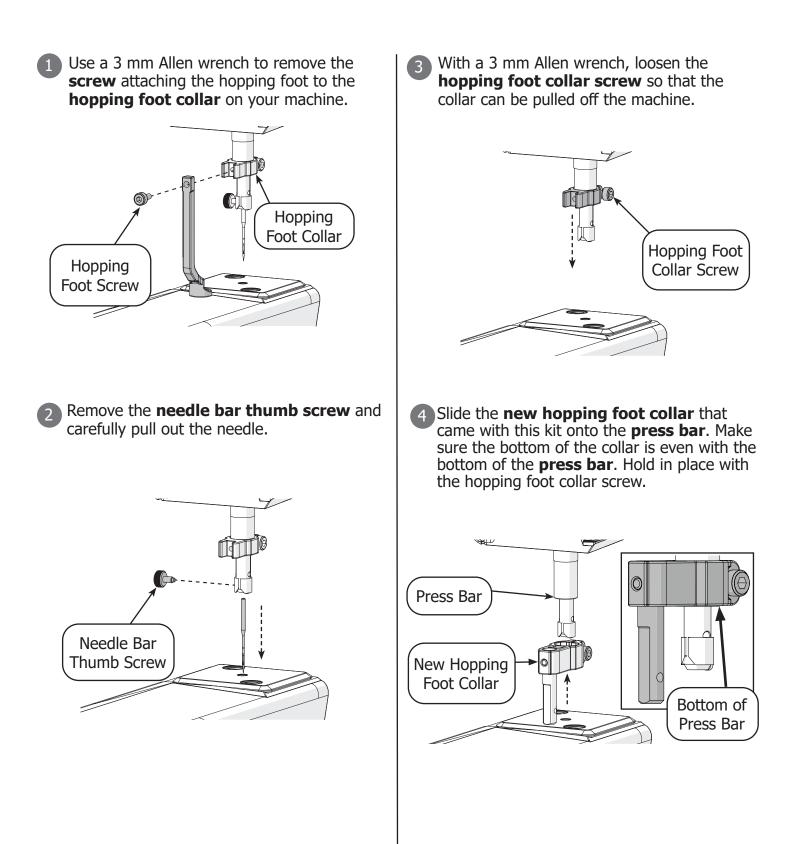

Foot Installation Instructions:


These instructions will go over how to remove the standard foot and how to install the new attachment feet. This process is the same for each of the three feet.

1 To remove the **Standard Hopping Foot**, use the 3 mm Allen wrench and take out the M3 x 8 mm SBHCS.

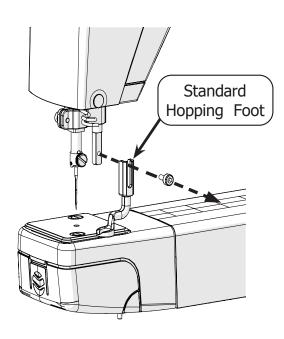


2


Select the hopping foot you want to install and use the 3 mm Allen wrench to loosely attach it to the machine with the M3 x 8 mm SBHCS.

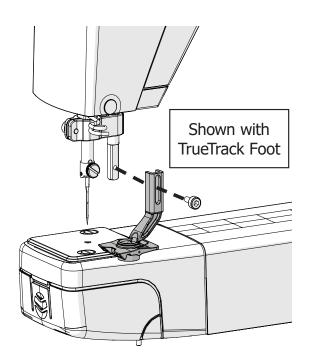

3 Move the machine off of the fabric and turn the handwheel to lower the needle to the lowest position.

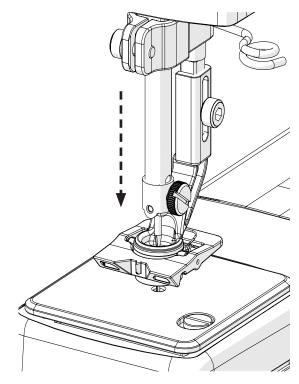

4 Slide the **Hopping Foot Height Tool** beneath the foot. Lower the foot until it rests on height tool. Tighten the M3 x 8 mm SBHCS with the 3 mm Allen wrench.

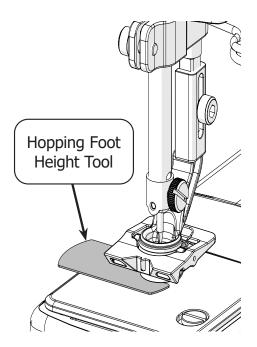


Usage Instructions:

These instructions will go over how to use each accessory foot with the included ruler.

Ruler:


The ruler's straight edge and markings will assist you in stitching straight lines as well as measuring the length of your stitches.

Note: For best results, pair with the accessory ruler base for your machine.

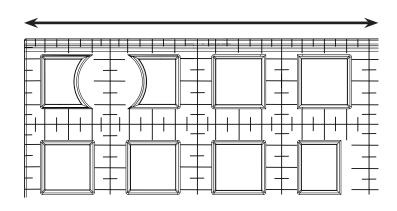


TrueTrack Foot:


1 Put the lip side of the ruler in front of the hopping foot. Press together until the ruler clips into place. The clip will keep the ruler attached.

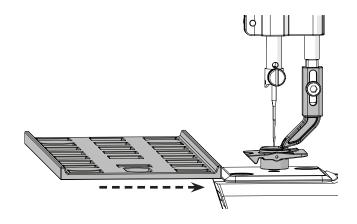


2 Use the ruler's edge and markings to stitch straight lines and to measure stitch length.

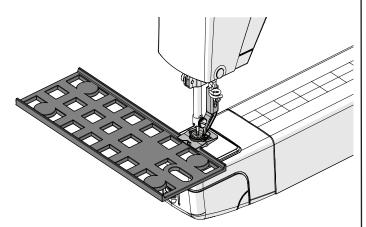

3 The foot's ball bearing system allows you to turn the ruler to measure stitches in any direction.

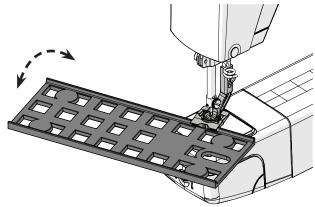


To release the ruler, press down on the back of the clip behind the foot and pull the ruler away from the foot.

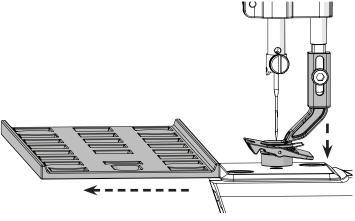


Precision Foot:


Use the Precision Foot's pointers to align your stitches with the markings on the ruler.

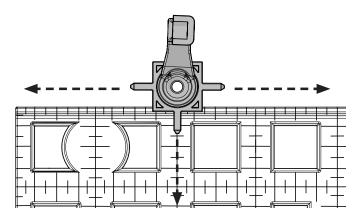

Press the lip side of the ruler to the front of the hopping foot. The ruler should align with the pointers on the hopping foot at right angles.

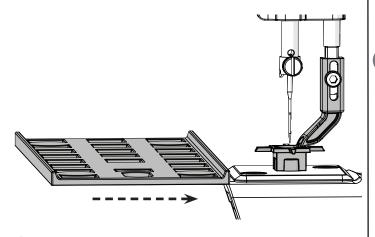


2 Hold the ruler against the foot to stitch straight lines and to measure stitch length. The swivel system allows you to turn the ruler to measure stitches in any direction.

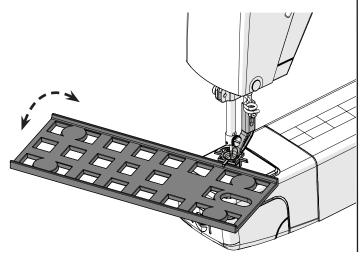


Rolling Foot:

Use this foot to easily glide the ruler's edge alongside the foot.

Press the lip side of the ruler to the front of the hopping foot.

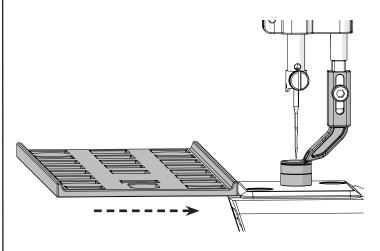

2 Hold the ruler against the foot to stitch straight lines and to measure stitch length. The swivel system allows you to slide the ruler along the foot and measure stitches in any direction.

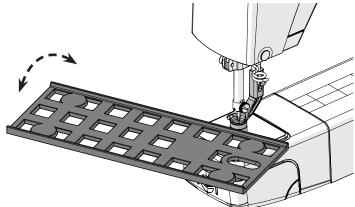

The Grace Company Phone: 1-800-264-0644 www.graceframes.com

