


Q'nique Laser


Included Parts and Tools

**Q'nique
Laser**



ACC-01-12544


**Pattern Perfect
Bracket**

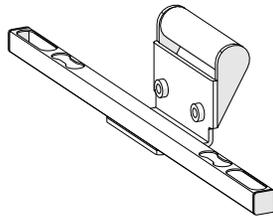

ACC-01-10178



**Allen Wrench
4mm**

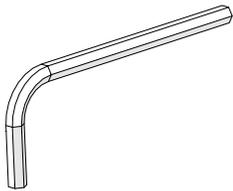


HDW-03-10167

**Velcro
Straps (x2)**




MIS-08-10807

**SBHCS
M6 x 20 mm (x2)**

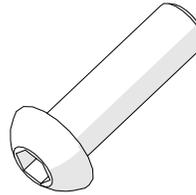

HDW-03-10088

**Laser
Tips (x4)**




PLA-09-10513

Assembly Instructions


Take the following steps to install the bracket onto your machine:

- 1 Gently lay your machine down on its side.

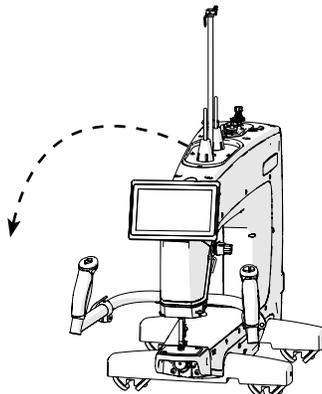


Note: Your machine may appear different than the model shown.

- 2 Angle the **Pattern Perfect bracket** so you can slide the end between the **two front wheels**. The bracket can be installed on either the right or left side of the machine.

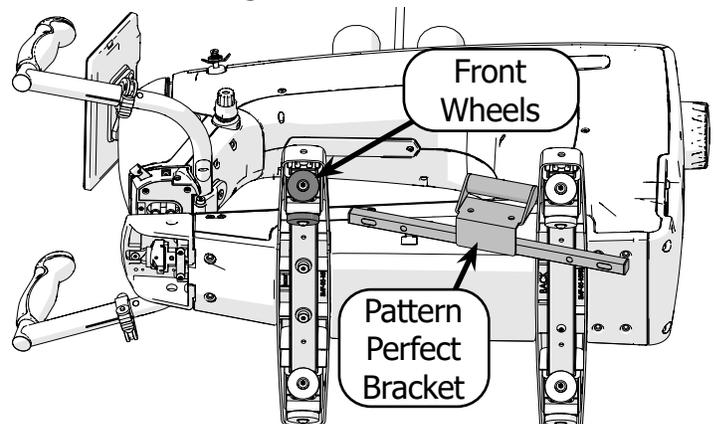


Q'nique Laser Instructions

- 3 Angle the pattern perfect bracket so it can be slid between the **two back wheels**.

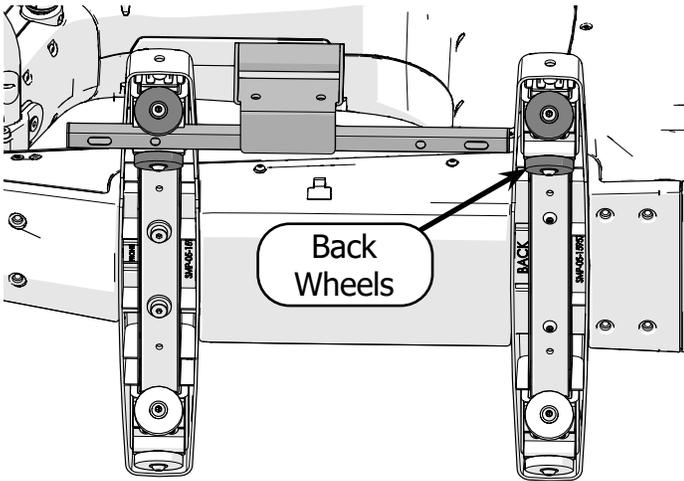



- 4 Align the holes in the bracket with those between the wheels. Use two **M6 x 20 mm SBHCS** and the 4 mm Allen wrench to screw the bracket in place.

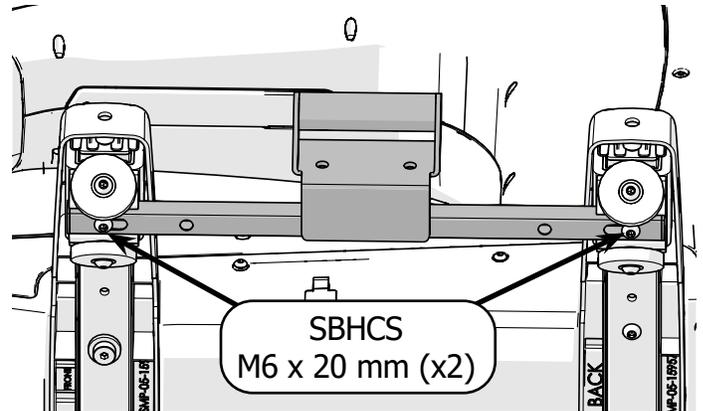



Use Instructions

The **Q'nique laser** can be snapped onto the handlebars of your machine for use in the front of the machine, or snapped to the Pattern Perfect bracket for use from the back of the machine.


Snapped onto the handlebars (front use):

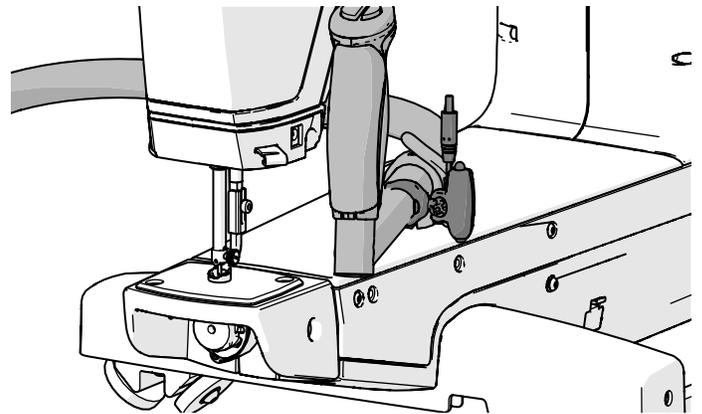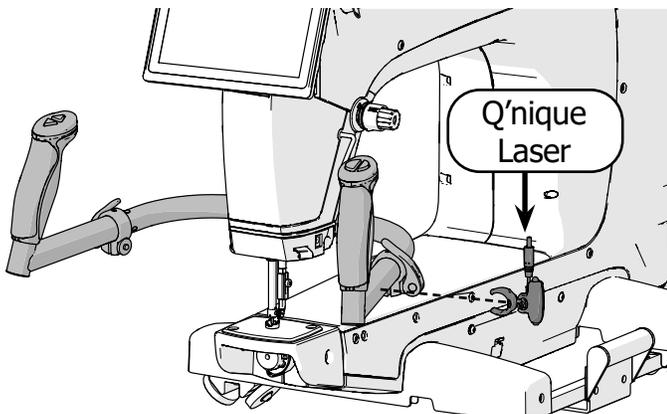

Snapped onto the laser onto the bracket (back use):

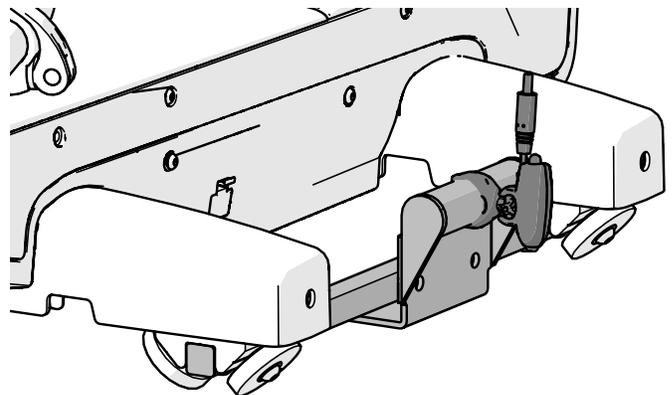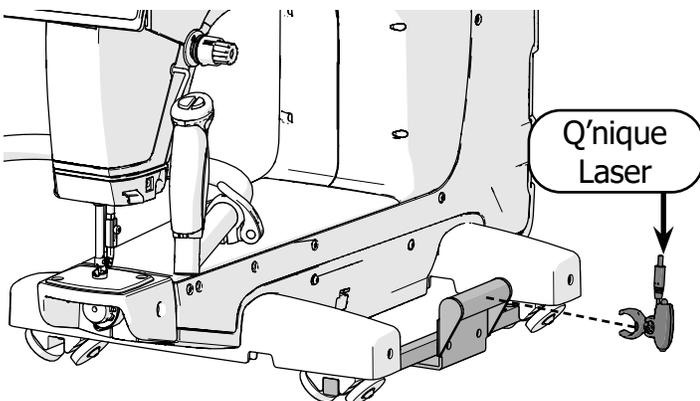

Change the diameter of the laser beam by switching between the four **laser tips**. The tips can be popped on or off the end of the laser. **For your safety:** turn off the laser before swapping out the laser tips. Never look into the laser beam.

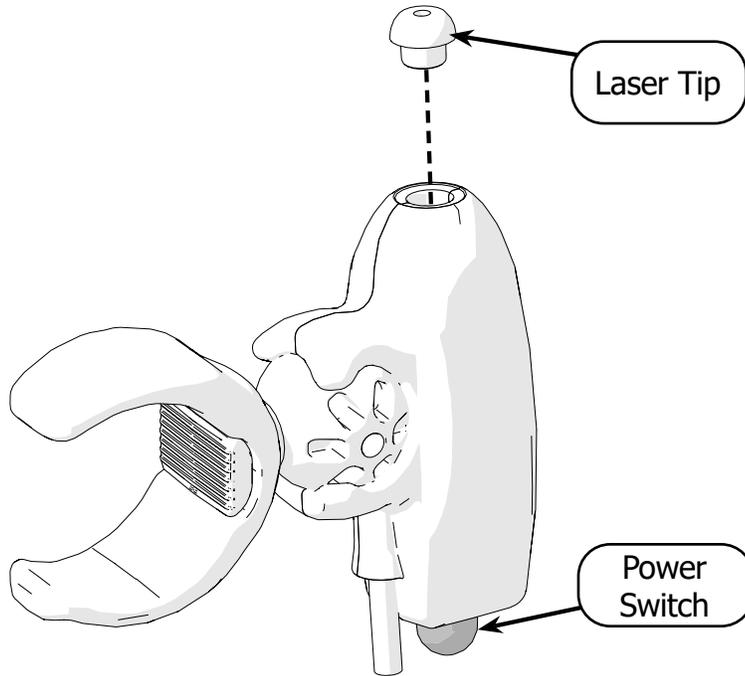


Cable Management Instructions

If using the laser mounted on your front handlebars, plug the laser cable into the **front laser port**. If mounting the laser on the pattern perfect bracket, plug the laser into the **back laser port**.


Check the following list for the port locations on your machine:

Q'nique 15 Series Front Port Location

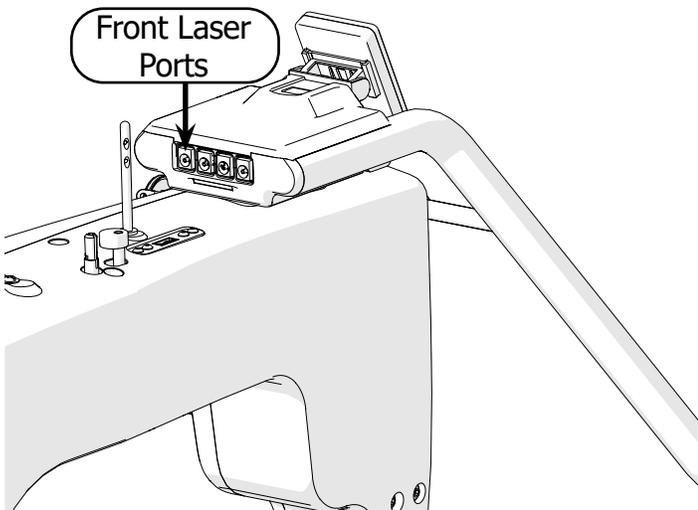


Q'nique 15 Series Back Port Location

The back laser port for this machine is located on the accessory back handles.

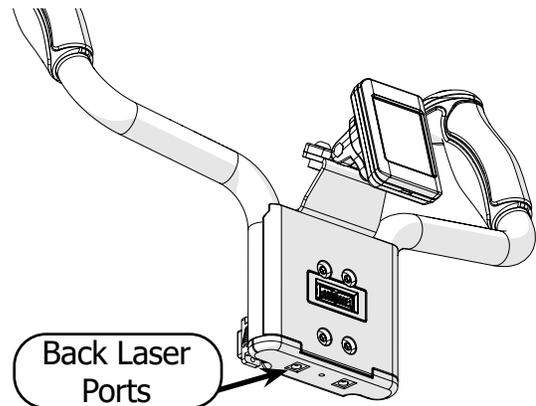


Note: Display may vary. Back handles may have 2 or 4 laser ports on the bottom.


Q'nique 16 Series Front Port Location

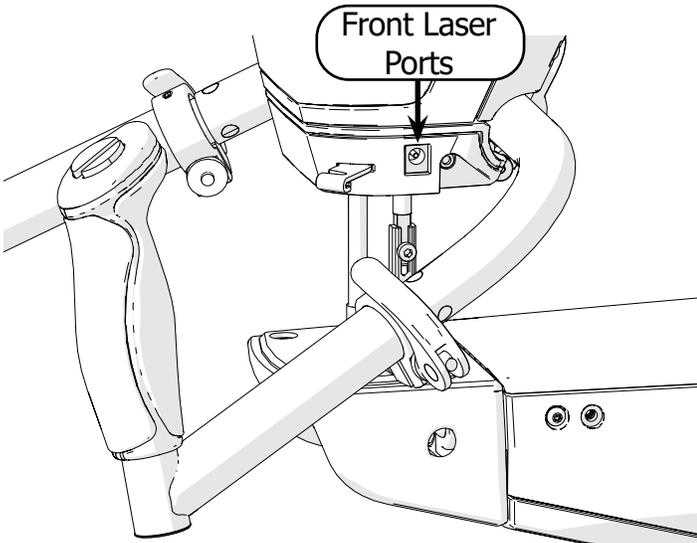


Q'nique 16 Series Back Port Location

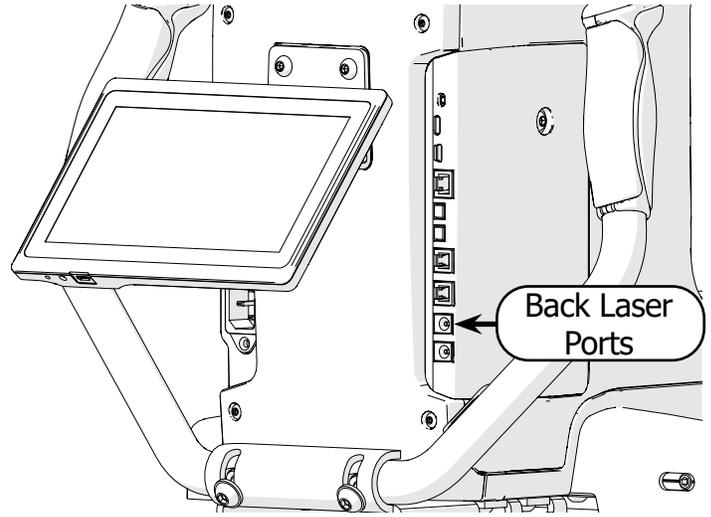


Q'nique 19 Series Front Port Location

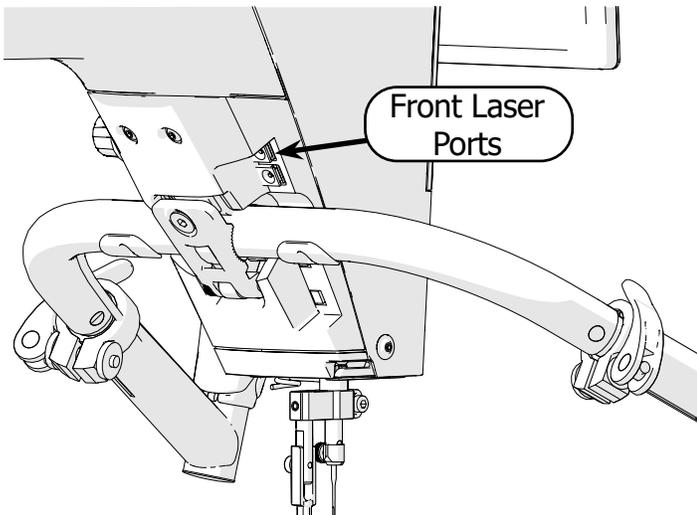

Q'nique 19 Series Back Port Location

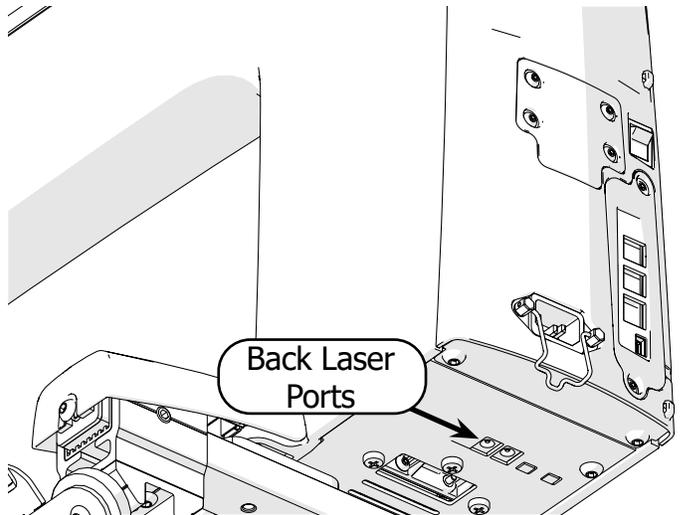


Q'nique 21 Series Front Port Location

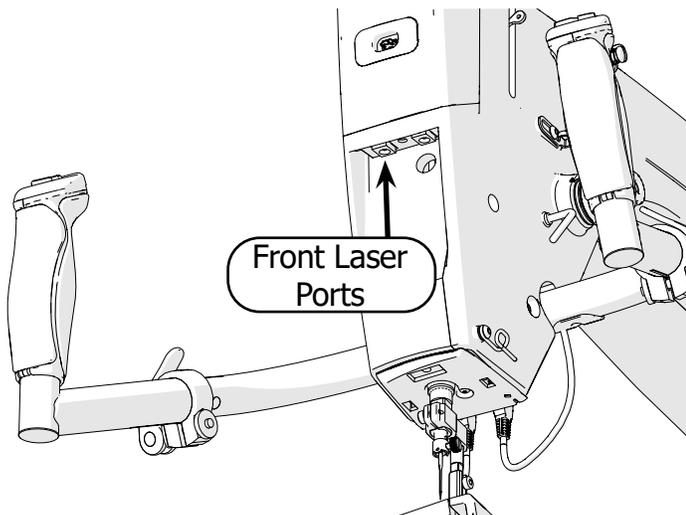

Q'nique 21 Series Back Port Location


The back laser port for this machine is located on the accessory back handles.

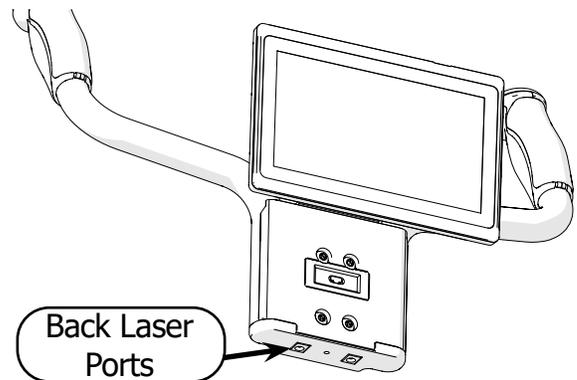


Note: Display may vary. Back handles may have 2 or 4 laser ports on the bottom.

Use the velcro straps to secure the cable to the front or back handles so that it doesn't get in your way while you're quilting.

If laser is mounted on front handles, attach the velcro to the front handles.

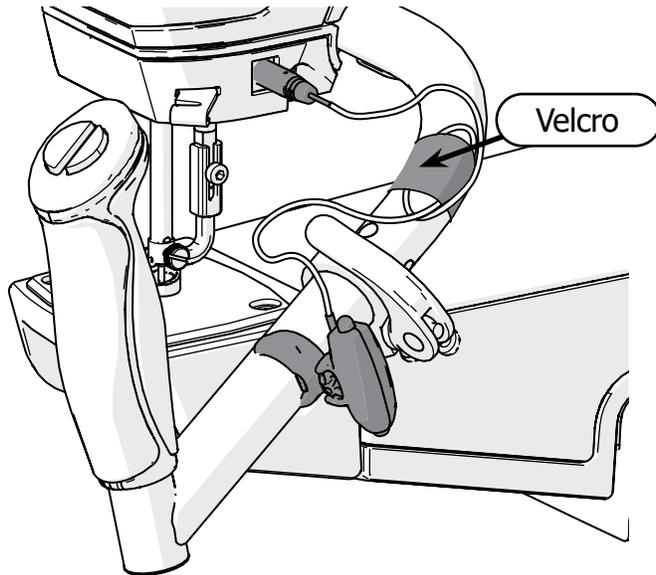

If the laser is mounted on the laser bracket and plugged into the back of the machine, attach the velcro to the back handles.

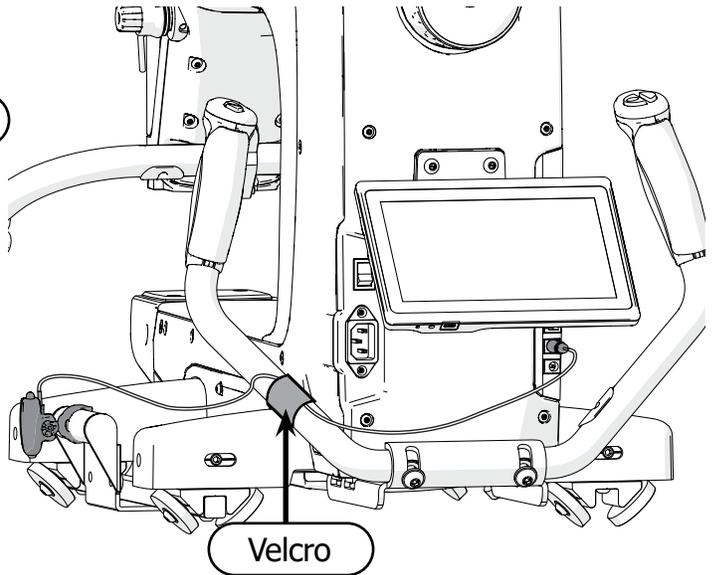

Note: Cable path will vary by machine model.

The Grace Company
Phone: 1-800-264-0644
www.graceframe.com

